

COTTON CANDY MACHINES

This “fun food” machine is a main attraction at events for the young or “young at heart”.

TIPS FOR TROUBLE-FREE OPERATION

1. Loosen transport knobs located on top of the machine just enough to allow the basket to balance and the motor to have some flexible movement.
2. Plug in floss machine. (12volt of power is needed)
3. ALWAYS add sugar with the motor **OFF**.
4. Fill 90% full whenever you add sugar.
5. Push both heat and motor switches **ON**.
6. Reduce “heat control fine tuning” setting to eliminate smoking of machine.
7. Determine optimum setting for “heat range” and “heat control fine tuning”.



COTTON CANDY “FLOSS” MAKING PROCEDURES

1. Moisten the inside of the floss pan with a damp cloth, or use the netting so floss will adhere to the pan.
2. Note the direction of the floss as it is spun off the floss head.
3. Adjust leather floaters (on top of the spinner head): up for more lift, down for less.
Practice will give good control.
4. Hold the cone an inch or two at the pointed end between two fingers and thumb.
5. Break into the web of floss with a light flicking motion.
6. Lift up the cone with the ring of floss attached and wind the floss onto the cone.
7. Brush cone with damp sponge so floss does not adhere to cone.
8. Roll floss on outside perimeter of pan **ONLY**.
9. Turn the ring of floss onto the cone in a “figure 8” pattern to make a larger batch.

CLEANING TIPS

1. Run all of the sugar out of the floss head.
2. Turn heat to the highest setting for one minute when empty to remove carbon from ribbons.
3. Unplug main electrical supply cord **FIRST**.
4. Wipe floss head with damp cloth. **NEVER ALLOW WATER TO ENTER THE FLOSS HEAD.**
5. Be sure all parts are dry before resuming operation or returning the machine.
6. Tighten both knobs located on top of the machine to secure motor for transport.

