

# Margarita Machine

## Power is critical!

1. Prepare mix as per instructions on mix bottle or bucket provided to prepare. If the recipe is not right, you may find the results to be less than perfect.
2. Pour mix into reserve tank until reserve tank is full. (Approximately 3 gallons)
3. Plug machine directly into a DEDICATED 20 amp circuit. **NO EXTENSION CORD!** If possible, test machine with product 24 hours before your event starts. After freezing, turn off leaving product in the machine. Restart the machine 1 hour before the party.
4. Flip both toggle switches to freeze. 45 seconds after the power to the machine is turned on, with both toggle switches in the freeze position, the compressor should come on and stay on till you have frozen product. The freeze position is the position showing the snowflake icons.
5. If the compressor is cycling on and off and the product is not frozen you have a **POWER** issue. **Make sure the circuit the machine is plugged into has nothing else on it or try another circuit.** A circuit can have several outlets. They do not have to be in the same room to be on the same circuit. The most reliable plug would be one installed for a refrigerator or freezer. ***POWER IS CRITICAL!!!!***
6. Product will freeze in approximately 30 to 45 minutes. If the product gets too frozen, turn the bottom switch to the thermometer icon. Monitor the product for consistency and turn switches as needed.
7. To serve, pull knob out with cup under faucet.
8. **KEEP RESERVE TANK FULL!** It is chilling the mix before going to freezing cylinder.
9. These machines are very reliable as they rarely have a problem. If you are still unable to get the machine to freeze, call One Stop Tents & Events' main phone number for 24hr assistance.
10. **Do Not:** Add Ice
11. **Do Not:** Place hands in Machine
12. **Do Not:** Take Machine apart for any reason.
13. **Do Not:** Use an extension cord.
14. **Do Not:** Lay machine on its side!
15. To rinse, pour water into tank. Put top toggle switch to clean out position and run for a minute. Pull knob and empty into bucket. Once returned, we will clean the machine. **DO NOT TAKE APART!!!**

One Stop Tents & Events makes every effort to make sure your machine will work properly, but we cannot possibly predict every possible situation. The machines are checked out before each rental and if there is a complaint on a machine it is checked upon return. We track each machine's history by serial number. In very few cases, the machine does not work properly. Often this is caused by transportation or electrical surges which are out of our control. Our responsibility is to give you a working machine, not to guarantee it will work with your power. In rare cases, when alerted of problems, we send the machine to a certified repair vendor. We do not refund for issues out of our control.