

Outdoor Radiant Heater



HEATER OPERATION

TO TURN ON THE HEATER

- A. Turn on the valve on the gas supply cylinder completely.
- B. Press lightly and turn the variable control knob to **PILOT** position.
- C. Press down the variable control knob and hold for 30 seconds. While holding down the variable control knob, press the **igniter** button several times until the pilot flame lights. Release the variable control knob after the pilot flame lights.
- D. Press lightly and turn the variable control knob to **LO**(minimum) position and leave it there for about 5 minutes, then turn variable knob to switch to desired temperature position.

Note: A 5 minute complete shut off period is necessary before re-lighting.

TO TURN OFF THE HEATER

- A. Turn the variable control knob to **LO** position.
- B. Turn the variable control knob to **PILOT** position.
- C. Then press lightly and turn the variable control knob to **OFF** position.
- D. Turn off the valve on the gas supply cylinder to shut down the heater completely.

